

FOGLIO ISTRUZIONI INSTRUCTION MANUAL
DRAM cod. DRA001 / DRA002 / DRA003 / DRA004

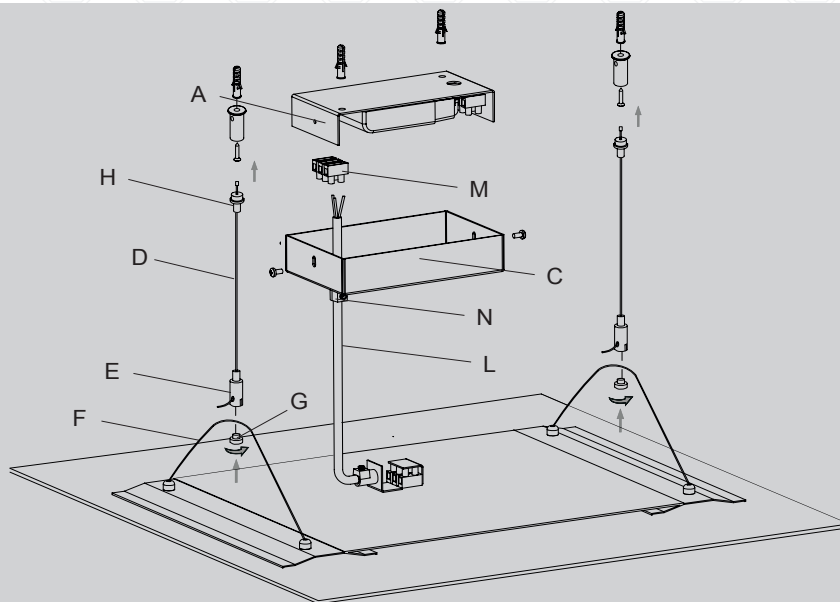


Fig.1

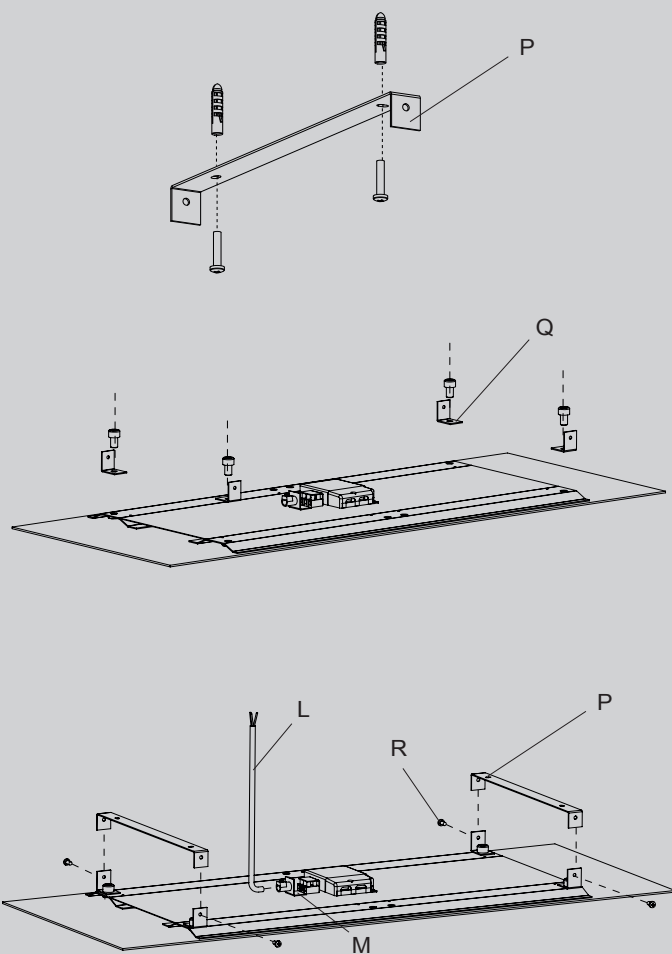


Fig.2

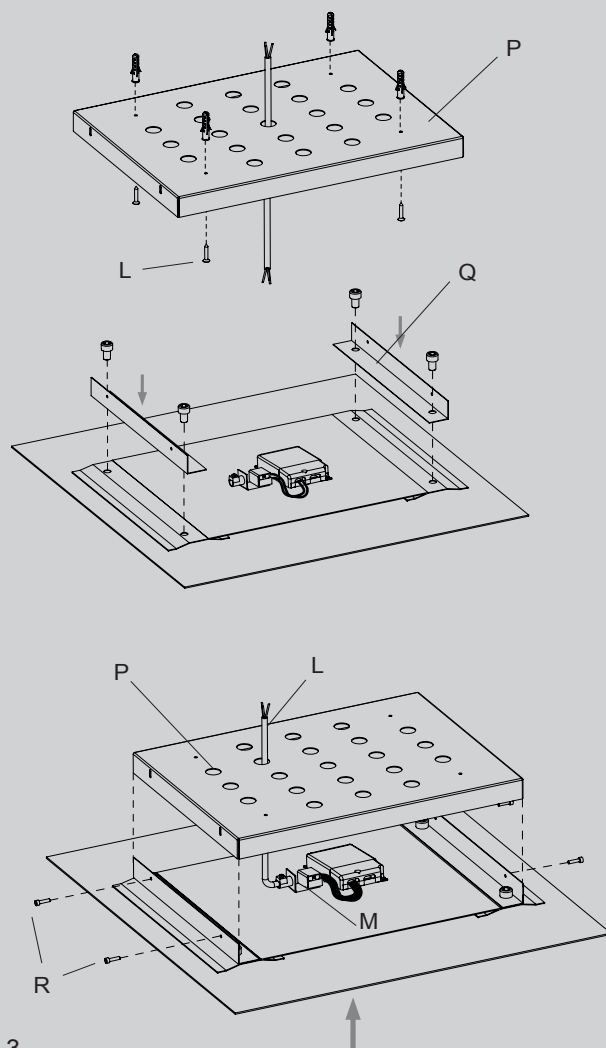


Fig.3

serie DRAM

I

Avvertenze generali

- L'apparecchio è costruito a regola d'arte, e la sua durata elettrica sarà più efficiente se esso sarà usato correttamente.
- Leggere attentamente le avvertenze che seguono in quanto forniscono importanti indicazioni riguardanti la sicurezza di installazione d'uso e di manutenzione.
- Dopo aver tolto l'imballaggio assicurarsi dell'integrità dell'apparecchio. In caso di dubbio non utilizzare l'apparecchio e rivolgersi al proprio rivenditore.
- Gli elementi dell'imballaggio (sacchetti in plastica, ecc.) non devono essere lasciati alla portata dei bambini in quanto potenziali fonti di pericolo.
- Prima di collegare l'apparecchio accertarsi che i dati di targa siano rispondenti a quelli della rete di distribuzione elettrica alla quale l'apparecchio sarà collegato. (L'etichetta con i dati di targa è situata all'interno dell'apparecchio stesso).
- Questo apparecchio dovrà essere destinato solo all'uso per il quale è stato espressamente concepito e cioè per l'illuminazione di ambienti chiusi e **non** umidi, con temperatura ambiente max. 35°C (95°F).
- Prima di effettuare qualsiasi operazione di pulizia o di manutenzione, disinserire l'apparecchio dalla rete di alimentazione elettrica spegnendo l'interruttore dell'impianto, e in caso di guasto rivolgersi solamente a personale professionalmente qualificato.
- Il mancato rispetto di quanto sopra può compromettere la sicurezza dell'apparecchio.
- Il costruttore non può essere considerato responsabile per eventuali danni derivanti da usi impropri, erronei ed irragionevoli.

Istruzioni per l'installazione

MONTAGGIO A SOSPENSIONE

1. Rilevare l'interesse dei rosoni di fissaggio dell'apparecchio e segnare sulla superficie dove dovrà essere fissato.
2. Fissare la staffa (A) del rosone elettrificato (C) al soffitto tramite viti e tasselli (non in dotazione). [Fig.1]
3. Infilare la parte libera della fune di acciaio (D) nel foro presente sul regolatore millimetrico (E); per liberare il cavo premere sulla bussola e bloccarlo serrando la ghiera.
4. Inserire e fissare l'archetto (F) sul regolatore millimetrico (E) tramite la vite (G).
5. Fissare l'altra estremità del rosone (H) sul rosone di ancoraggio (A).
6. Collegare il cavo (L) al morsetto (M) presente nel rosone elettrificato (C), facendo attenzione a rispettare le polarità indicate.
7. Fissare il rosone elettrificato (C) sulla staffa (B) tramite le due viti in dotazione.
8. Serrare a fondo il pressacavo (N) presente sul rosone elettrificato.

MONTAGGIO CON ATTACCO A PLAFONE

Folio FL111XX - FL112XX - FL115XX - FL116XX

1. Rilevare l'interesse dei fori di fissaggio della copertura plafoniera (P) e segnare sulla superficie, dove dovrà essere fissato l'apparecchio [Fig. 3].
2. Fissare, mediante viti e tasselli (non in dotazione) la copertura (P) a soffitto, avendo cura di far passare il cavo di alimentazione (L) da uno dei fori presenti.
3. Fissare le staffe di supporto (Q) al corpo apparecchio tramite le viti in dotazione.
4. Collegare il cavo (L) al driver presente sull'apparecchio tramite la morsetteria (M), facendo attenzione a rispettare le polarità indicate.
5. Posizionare l'apparecchio sulla copertura a soffitto (P) fino in battuta e fissare con le 4 viti in dotazione (R).

Folio FL101XX - FL102XX - FL105XX - FL106XX

1. Rilevare l'interesse dei fori di fissaggio delle staffe di aggancio (P) e segnare sulla superficie, dove dovrà essere fissato l'apparecchio [Fig. 2].
2. Fissare, mediante viti e tasselli (non in dotazione) le staffe (P) a soffitto
3. Fissare le staffe di supporto (Q) al corpo apparecchio tramite le viti in dotazione.
4. Collegare il cavo (L) al driver presente sull'apparecchio tramite la morsetteria (M), facendo attenzione a rispettare le polarità indicate.
5. Posizionare l'apparecchio sulle staffe a soffitto (P) fino in battuta e fissare con le 4 viti in dotazione (R).

Avvertenze importanti

- Il prodotto non deve essere modificato. Qualsiasi modifica annulla la garanzia e può rendere pericoloso il prodotto. La PLEXIFORM S.r.l. declina ogni responsabilità per i danni causati da un proprio prodotto montato in modo non conforme alle istruzioni.
- Si consiglia di controllare i componenti di materiale plastico - specialmente quelli preposti alla sospensione degli apparecchi - almeno ad ogni cambio lampada.
- I componenti che dovessero danneggiarsi devono essere sostituiti con componenti analoghi.
- L'installazione dei prodotti deve essere eseguita a regola d'arte.
- Per evitare surriscaldamenti pericolosi, si raccomanda di non installare l'apparecchio in spazi angusti privi di ricambio d'aria.
- In nessun caso l'apparecchio di illuminazione deve essere ricoperto con materiali isolanti o similari.
- L'apparecchio è destinato ad essere installato anche su superfici normalmente infiammabili.

DRAM series

GB

General Warnings

- The fitting is manufactured in a workmanlike fashion, and its electric life will be more efficient if it is used correctly.
- Read the following warnings carefully since they contain important information about installation, usage and maintenance safety.
- After removing the packaging, make sure that the fitting is intact. If in doubt, do not use the fitting and contact your retailer.
- Packaging materials (plastic bags, etc.) must not be left within the reach of children, as they are a potential source of danger.
- Before connecting the fitting to the power supply make sure that the rating corresponds to the rating of the electricity network to which the fitting will be connected. (The rating label is located on the cover of the fitting itself).
- This fitting must be used exclusively for the purpose for which it is explicitly designed, i.e. for lighting closed and **not** damp environments, with a maximum ambient temperature of 35°C (95°F).
- Before carrying out any cleaning or maintenance operations, disconnect the fitting from the electricity network supply by switching off the system's switch, and if a fault occurs, contact professionally qualified personnel only.
- Failure to observe the above may jeopardise the safety of the fitting.
- The manufacturer cannot be considered liable for any damages deriving from improper, wrong and unreasonable use of the fitting.

Installation Instructions

HANGING-TYPE ASSEMBLY

1. Determine the wheelbase of the anchoring roses of the apparatus and mark on the surface where this must be secured.
2. Secure the bracket (A) of the electrified rose (C) to the ceiling, by means of a dowels and screws (not supplied) [Fig. 1].
3. Introduce the free end of the steel cable (D) in the hole on the millimetre gauge; to free the cable, press on the bush and lock it, tightening the ring nut.
4. Introduce and secure the arch (F) on the millimetre gauge (E) with the screw (G).
5. Secure the other edge of the ceiling rose (H) to the anchoring rose (A).
6. Connect the cable (L) to the terminal (M) located on the electrified rose (C), paying attention to respect the indicated polarities.
7. Secure the electrified rose (C) on the bracket (B), using the two supplied screws.
8. Tighten the cable gland (N) located on the electrified rose, thoroughly.

ASSEMBLY WITH CEILING MOUNT

Folio FL111XX - FL112XX - FL115XX - FL116XX

1. Determine the wheelbase of the anchoring holes of the ceiling light fixture cover (P) and mark on the surface where the apparatus will be secured. [Fig. 3].
2. By means of screws or dowels (not supplied), secure the cover (P) to the ceiling, paying attention to pass the supply cable (L) through one of the holes available.
3. Secure the support brackets (Q) to the apparatus body, using the supplied screws.
4. Connect the cable (L) to the driver located on the apparatus through the terminal board (M), paying attention to respect the indicated polarities.
5. Position the apparatus on the ceiling cover (P) until it rests on it, and secure using the 4 supplied screws (R).

Folio FL101XX - FL102XX - FL105XX - FL106XX

1. Determine the wheelbase of the anchoring holes of the ceiling brackets (P) and mark on the surface where the apparatus will be secured. [Fig. 2].
2. By means of screws or dowels (not supplied), secure the brackets (P) to the ceiling
3. Secure the support brackets (Q) to the apparatus body, using the supplied screws.
4. Connect the cable (L) to the driver located on the apparatus through the terminal board (M), paying attention to respect the indicated polarities.
5. Position the apparatus on the ceiling brackets (P) until it rests on it, and secure using the 4 supplied screws (R).

Important Warnings

- The product must not be changed. Any change cancels the guarantee and may make the product dangerous. PLEXIFORM S.r.l. declines any liability for damages caused by any of its products that have been mounted in a way that does not comply with instructions.
- You are recommended to check the plastic components – especially those used to suspend fittings – at least every time you change a lamp.
- Any damaged components must be replaced with identical components.
- The products must be installed in a workmanlike manner.
- To prevent dangerous overheating, do **not** install the fitting in narrow spaces without an exchange of air.
- The appliance should under no circumstances be covered by insulating or a like material.
- The fitting is **also** designed to be installed on normally inflammable surfaces.

Smaltimento Disposal



Questa marcatura indica che il prodotto non deve essere smaltito con altri rifiuti domestici in tutta l'UE. Per evitare eventuali danni all'ambiente o alla salute umana causati da smaltimento dei rifiuti, riciclarlo in maniera responsabile per favorire il riutilizzo sostenibile delle risorse materiali, per riportare il dispositivo utilizzato si prega di utilizzare i sistemi di restituzione e raccolta o contattare il rivenditore presso il quale il prodotto è stato acquistato. Possono prendere questo prodotto per l'ambiente riciclo sicuro.

This designation indicates that the product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from waste disposal, recycle it responsibly to promote the sustainable reuse of material resources, to bring the device used, please use the return and collection systems or contact the retailer which the product was purchased. They can take this product for environmentally safe recycling.